


KLONDIKE SLEDGE PLAN

Paint your sledge bright colors — varnish the bottom of the runners — then wax before use. The Eskimos iced their runners. Accessories may be added — a canvas show curtain as a snow guard front and sides will keep equipment dry. Use screws in place of nails; drill first to avoid splitting!!!

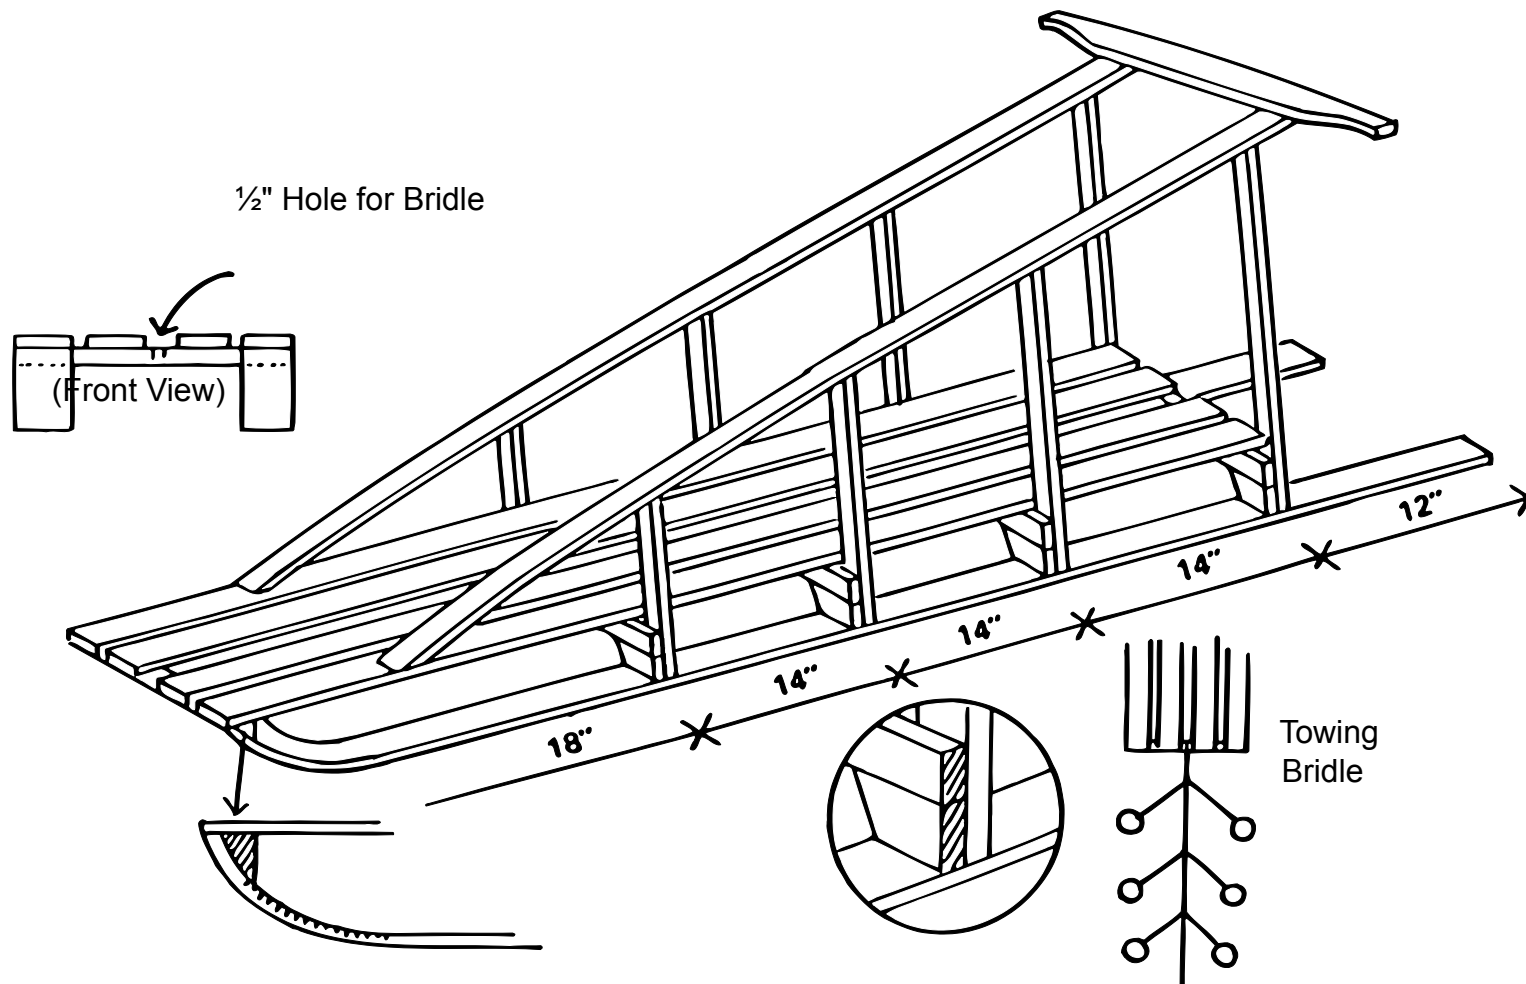

BILL OF MATERIAL

- 2 pcs. 4" x 1/2" x 6'6"
Runner
- 4 pcs. 1 5/8" x 18"
Cross Support
- 4 pcs. 1/2" x 4 x 5'
Floor Cover
- 8 pcs. 1" x 2" x 6'
Upright Support
- 2 pcs. 1" x 2" x 40"
Rear Upright
- 2 pcs. 1" x 2" x 38"
2nd Rear Upright
- 2 pcs. 1" x 2" x 26"
2nd Front Upright
- 2 pcs. 1" x 2" x 12"
Front Support
- 2 pcs. 1/2" x 2" x 6'
Hand Rail
- 1 pc. 1/2" x 2" x 30"
Front Curved Guard
- 1 pc. 2" x 2" x 18"
Tow Bar
- 1 pc. 1" x 3" x 30"
Pushing Handle